

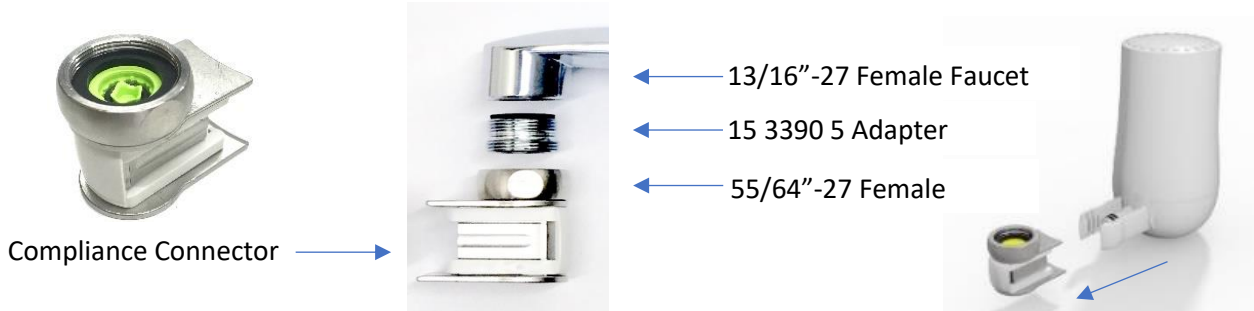
QCK17 CleanSpray Faucet Connection Kit






The **CleanSpray Faucet Connection Kit** helps end users identify what parts are needed to install the CleanSpray filters to faucets for a variety of thread options. This kit includes the most common adapters that will fit most standard faucet threads and alternative adapters for less common threads.

After the correct installation parts required have been identified, customers may order the specific adapters needed directly from AquaMedix or source through other plumbing suppliers.

All included fittings convert the faucet connection point to **55/64"-27 Male** threads to accept the CleanSpray Compliance Connector (P/N: 48116) which features a stainless steel **55/64"-27 Female** connection.

Once the compliance connector is attached, installation and future replacement of the filter cartridge is extremely simple by pressing the hidden release button on the compliance connector. No additional plumbing or tools are required.



	Mfg.	Qty.	Part#	Description
	Neoperl	1	15 3410 5	3/4"-27 Female x 55/64"-27 Male
	Neoperl	1	15 3620 5	3/8"-18 FPT x 55/64"-27 Male
	Neoperl	1	15 3390 5	13/16"-27 Male x 55/64"-27 Male
	Neoperl	1*	15 3360 5	15/16"-27 Male x 55/64"-27 Male
	Neoperl	1	BW713410008	2 mm EPDM, Washer (for Compliance Connector)

**Each Compliance Connector kit (P/N: 48116) includes one 15 3360 5 adapter and EPDM washer. Connector parts are available through AquaMedix or by order through limited vendors. Threaded filter connections may additionally be wrapped with thread seal tape (PTFE tape/plumber's tape) to provide thread lubrication, although thread tape is not required to form a seal for parts with gaskets. Equivalent parts are also available from other manufacturers and plumbing distributors.*

If faucet tap threads other than 55/64"-27 Male are encountered, the male thread adapter included with the Compliance Connector may be used in combination with other common thread adapters included in this kit to convert the faucet threads to provide a 55/64"-27 Male connection.

Contact info@aquamedix.net for further support if you experience complications during installation.